


# Classic Mid-Sized Flip Clock (Model: FC093) User Manual

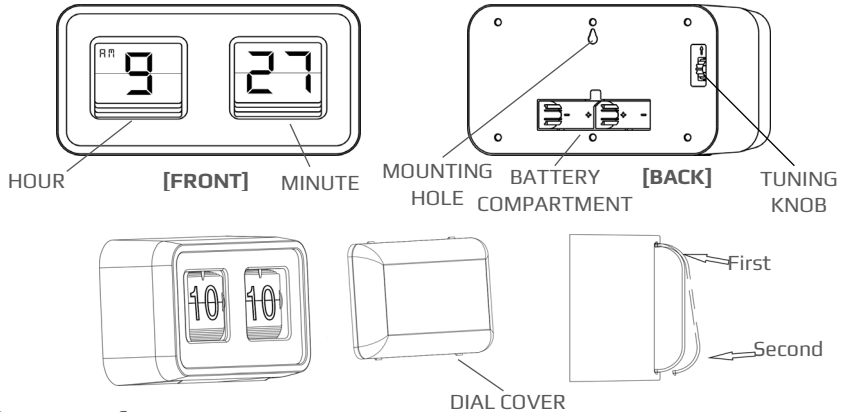

## Product Specification

- Wall mount / Freestanding
- Power: 2 × C battery
- Main Material: plastic, acrylic, replaceable PVC pages
- Dimension: 26.40cm×14.40cm×7.50cm / 10.40"×5.67"×2.95"
- Net Weight: 910±10g
- Accuracy: monthly error  $\leq \pm 90$  seconds
- Operating temperature: -10°C ~ 50°C

## Direction of Use

1. Take the clock out of the box and carefully remove the package cushioning. Fix the topside of the dial cover onto the clock, squeeze the cover and fix the bottom side onto the clock.
2. Insert two C batteries into the battery compartment. Ensure that the positive and negative polarities match the illustrations inside the battery compartment.
3. Turn the Tuning Knob upwards to set the time. Please set the time one minute ahead. The knob only goes one way. Turning it to the opposite direction with force will break the device.
4. Hang vertically or it stands on a flat surface.
5. Please do not bend any pin that holds the page. It will damage the device.
6. When the clock starts losing time, please replace the battery. Batteries normally last at least 6 months but it varies between brands.
7. Pages are replaceable. In need of cleaning, please gently bend the page, remove it from the clock and wipe it clean. To fix the page back on, please gently bend it and insert the pin of the page back into the original slot. If the replacement pages are needed, please contact our customer support team.

## Customer Support

This product comes with a 1-year guarantee. Please visit [www.ideapot.co.uk](http://www.ideapot.co.uk) for details. For enquiries regarding the product, please contact your retailer, or email us at [customercare@ideapot.co.uk](mailto:customercare@ideapot.co.uk). The following information may be needed.

Place of purchase: \_\_\_\_\_

Price: \_\_\_\_\_

Date of purchase: \_\_\_\_\_

Model number: \_\_\_\_\_

Payment method: \_\_\_\_\_

Finish:

Page colour:

White  Black

Black  White