


Biplane Flip Clock (Model: FC029) User Manual

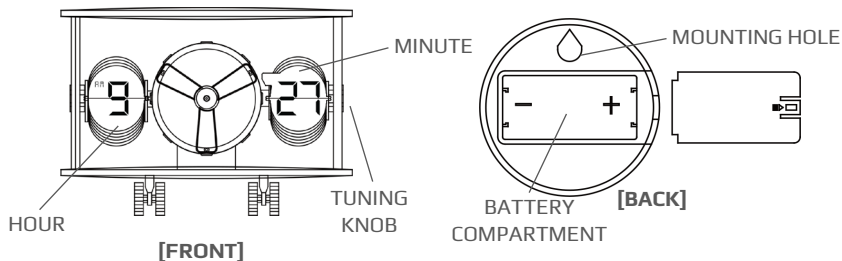

Product Specification

- Freestanding / Wall mount
- Power: 1 × C battery
- Main Material: stainless steel, PVC pages, plastic
- Dimension: 21cm×18.1cm×13.6cm / 8.27"×7.13"×5.35"
- Net Weight: 520±10g
- Accuracy: monthly error $\leq \pm 90$ seconds
- Operating temperature: -10°C ~ 50°C

Direction of Use

1. Take the clock out of the box and carefully remove the package cushioning.
2. Insert one C battery into the battery compartment. Ensure that the positive and negative polarities match the illustrations inside the battery compartment.
3. Turn the Tuning Knob towards you to set the time. Please set the time one minute ahead. The knob only goes one way. Turning it to the opposite direction with force will break the device.
4. It stands on a flat surface or please hang vertically.
5. Please do not bend any pin that holds the page. It will damage the device.
6. Please do not turn the propeller or block the spinning of the propeller.
7. When the clock starts losing time, please replace the battery. Batteries normally last at least 6 months but it varies between brands.
8. Pages are replaceable. In need of cleaning, please gently bend the page, remove it from the clock and wipe it clean. To fix the page back on, please gently bend it and insert the pin of the page back into the original slot. If the replacement pages are needed, please contact our customer support team.

Customer Support

This product comes with a 1-year guarantee. Please visit www.ideapot.co.uk for details. For enquiries regarding the product, please contact your retailer, or email us at customer@ideapot.co.uk. The following information may be needed.

Place of purchase: _____

Price: _____

Date of purchase: _____

Model number: _____

Payment method: _____

Finish:

Vintage green

Matte Black

Page colour:

Black