
## Clapperboard Digital Clock (Model: DC017) User Manual

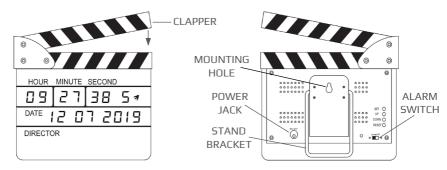

Package Includes: clock×1, adaptor×1, manual×1

## **Product Specification**

- Free standing / Wall mount
- Power: 6 ~ 9V DC input
- Main Material: acrylic dial plate, metal bracket, plastic
- Dimension: Product Dimension: 23cm×23cm×4cm / 9.06"×9.06"×1.57" (clock), 180cm / 70.87" (cable)
- Net Weight: 650±10g
- Accuracy: monthly error ≤ ±90 seconds
- Operating temperature: -10°C ~ 50°C

## **Direction of Use**

- 1. Take the clock out of the box and carefully remove the package cushioning.
- 2. Use the provided adaptor to plug the clock into the mains.
- 3. Press 'SET', the 'year' display starts flashing, use 'UP'/'DOWN' to set the year.
- 4. Press 'SET', the 'month' display starts flashing, use 'UP'/'DOWN' to set the month.
- 5. Use the same buttons to set the date, hour, minute, press 'SET' when finish, the clock returns to Normal Display Mode and the display stops flashing.
- 6. When set the alarm, switch 'ALARM SWITCH' to 'ON', press 'DOWN' and hold for 3 seconds until the 'hour' display starts flashing, use 'UP'/'DOWN' to set the hour of the alarm, press 'SET', the 'minute display starts flashing, use 'UP'/'DOWN' to set the minute of the alarm, press 'SET' button when finish, the clock returns to Normal Display Mode.
- Use 'ALARM SWITCH' to activate/deactivate the alarm, when the alarm is activated, a bell icon will appear on the screen.
- 8. When alarm rings, clip down the clapper to stop the alarm or the alarm lasts for 1 minute. The alarm will ring at the same time the next day unless it is deactivated.

## **Customer Support**

This product comes with a 1-year guarantee. Please visit www.ideapot.co.uk for details. For enquiries regarding the product, please contact your retailer, or email us at customercare@ideapot.co.uk. The following information may be needed.

Place of purchase:	Price:
Date of purchase:	
Model number:	Payment method: