

## Zoetrope Wall Clock (Model: ZC135) User Manual

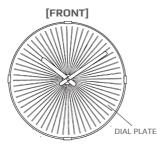

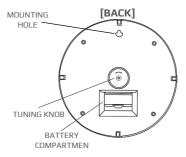

## **Product Specification**

- Wall mount
- Power: 1 × D battery
- Main Material: plastic
- Dimension: 30.70cm / 12" (diameter), 7cm / 2.76" (thickness)
- Net Weight: 705±10g
- Accuracy: monthly error ≤±90 seconds
- Operating temperature: -10°C ~ 50°C

## **Direction of Use**

- 1. Remove the screws from the back of the box (if there is any). Take the clock out of the box and carefully remove the wrap.
- Set the time to 12 o'clock with the Tuning Knob at the back. Check if the hour hand and the minute hand overlap and pointing upwards. If not, turn the clock hands to adjust it. This should be the only occasion that the clock hands are turned.
- 3. Insert one D battery into the battery compartment. Ensure that the positive and negative polarities match the illustrations inside the battery compartment.
- 4. Turn the Tuning Knob to set the time.
  - Tip: As there is no time ring on the clock dial, you may calibrate the setting at the top of the next hour.
- 5. Hang vertically.
- 6. Please do not lift the dial plate or block its movement. Please do not turn the hands of the clock or the dial plate with force.
- 7. When the clock starts losing time, please replace the battery. Batteries normally last at least 6 months but it varies between brands.

## **Customer Support**

This product comes with a 1-year guarantee. Please visit www.ideapot.co.uk for details. For enquiries regarding the product, please contact your retailer, or email us at customercare@ideapot.co.uk. The following information may be needed.

Place of purchase:		Price:	
Date of purchase: Model number:		Payment method:	
Designs:		_	_
Walking Man 🛛	Galloping Horse		Drumming 🗸
Running Man 🛛	Dog	$\overline{\mathbf{v}}$	Strumming Guitar √
Beating Heart 📈	Cat	$\overline{\mathbf{v}}$	